

kettle overnight; use filtered water instead of tap water.

- Descale the kettle regularly, at least once a month. In areas of very hard water descaling may be necessary more often.
- When descaling, follow the instructions on the packet of the descaler. When descaling has finished, empty the kettle and rinse it out numerous times with fresh water, then refill with freshwater, boil, and discard boiled water.

#### Water Filter

Depending upon the hardness of the water the scale particles that remain suspended in the water may give a cloudy appearance. The filter fitted to your kettle will prevent these particles passing into your drink. You therefore must ensure that the filter is kept clean and clear of deposits.

- You should clean the filter whenever there are any obvious deposits left on the mesh and especially if pouring is affected.
- Make sure that your hands are clean and free from hand cream, soap or similar, which might leave a slight taint to the water.
- Remove the kettle from the power base and ensure kettle is cold.
- Open the lid. Hold the top of the filter and pull it gentle up and out of the kettle. Rinse it under a tap

whilst softly brushing it with a soft brush. Rinse the kettle out with fresh water.

- To replace, align the sides of the filter with the grooves in the filter holder, and slide it slowly downwards and back into place.

#### 5 Full One Year Warranty

A short power supply cord is provided to reduce hazards resulting from becoming entangled in or tripping. Longer cord set or extension cords may be used if care is exercised in their use.

If a longer cord set or extension is used,

1. The marked electrical rating of the cord set or extension should be at least as great as the electrical rating of the appliance, and should be a grounded type three 3- wire cord.
2. The longer cord should be arranged so that it will not drape over the counter top where it can be pulled on by children or tripped over accidentally.

Dualit warrants that this appliance shall be free from defects in material and workmanship for the period of one year from the date purchase. This warranty does not cover consequential damages of any kind or war resulting from accident or misuse.

If your appliance fails to operate properly while in use under normal household condition within the warranty period, simply contact the store where you purchased it or call the Dualit after sales service **Helpline 973.623.9730** or **email dualitusa@smithagy.net**.

If the appliance is found to be defective in material or workmanship, Dualit will, at our discretion repair or replace it free of charge.

This warranty is applicable only to appliance used in the United States. This supersedes all other express product warranty or guarantee statements.

# Dualit®

## GUARANTEE AND INSTRUCTIONS FOR DUALIT JUG KETTLE



1

Safeguards

2

Before Use

3

How To Use

4

Care And Cleaning

5

Warranty

# Dualit®

Congratulations on your purchase of the Dualit **Jug Kettle**. Before using your Jug Kettle please read these instructions carefully and keep them for future reference so that you obtain the best possible results.

Carefully remove all packaging before use but keep the packaging until you are satisfied that the **Jug Kettle** is working correctly.

## 1 IMPORTANT SAFEGUARDS

When using electrical appliance, basic safety precautions should always be followed, including the follow:

### 1. READ ALL INSTRUCTIONS

- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock and injury to persons do not immerse cord, plugs, or power base in water or any other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and cleaning the Jug Kettle.

- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner or in a heated oven.
- Do not leave the appliance unattended when in use.
- This Jug Kettle is for Household use ONLY.
- Do not switch on unless the Jug Kettle contains at least One cupful of water.
- Always use the filter and never overfill the kettle –boiling water may splash out.

## SAVE THESE INSTRUCTIONS

## 2 BEFORE USE

- Remove all packaging from the kettle and its power base. Before using the kettle for the first time, or if it has been out of use for a long time, fill to the max mark and boil, then discard the boiled water and rinse the kettle out with fresh cold water.

### Connection To The Mains Supply

- Check that the voltage marked on the appliance corresponds with the supply voltage.

## 3 HOW TO USE

- Position the power base as close to a wall socket as possible. Locate the mains cable so that it does not overhang the work surface, and cannot be caught accidentally. Shorten the mains lead by winding it around the cord storage area under the power base, and bring it out of the cord exit in the base.

### Opening The Lid

- Remove the kettle from the power base. If the switch has been pushed down inadvertently, it will spring up, into the "Off" position.
- Hold the kettle handle firmly in one hand, hold the lid knob in the other, and pull the lid straight up. As soon as it separates from the kettle, move it out of the rising steam.

### Filling

- Open the lid and fill the kettle via the

lid aperture. Not through the spout.

- Observe water level when filling, you must use at least one cup of water, but the water level must be below the Max mark.
- Do not overfill the kettle. If the kettle is overfilled, there is a risk that boiling water may be ejected from the spout and lid.
- Replace the lid and ensure it is firmly in place. Check that it is fully closed, otherwise the kettle may not switch off when boiling.

### Switching On

- Check that the switch is in the "Off" position (lift the kettle from the power base and set it down again taking care not to spill any water). The switch will only operate when the kettle is correctly fitted onto the base.
- Plug the power base into the wall socket. If necessary, switch on the wall socket.
- Press the switch down. The neon light will light up, and the kettle will start to heat up.
- When the water has boiled the kettle will automatically switch off, the switch will return to the "Off" position and the neon light will go out.

**NOTE: When you lift the kettle from the base, you will see drops of moisture on the surface of the power**

**base. This is the steam used to switch the kettle off automatically, which then condenses and escapes via vents in the underside of the kettle. This is perfectly normal, and should not be cause for alarm or returning the kettle.**

- Remove the kettle from the power base before attempting to pour.
- When filling or carrying the kettle, do not tilt it backwards, as this may allow water to pass through the steam tube onto the control area. Should this happen, the kettle must be allowed to dry before reuse.
- To avoid the risk of splashing, pour **slowly** and do not over-tilt the kettle.

**WARNING: IF THE KETTLE HAS JUST BOILED, IT WILL BE FULL OF STEAM, WHICH WILL ESCAPE AS SOON AS THE LID IS OPENED.**

### Boil Dry

- Do not switch the kettle on unless it contains at least one cup of water. Misuse of this kind will shorten the life of the kettle.
- If the kettle is accidentally switched on when it does not contain sufficient water, a boil-dry device will automatically switch it off. Wait until the kettle has

cooled down before refilling. The lid may be hot and the water may spit as it touches the kettle base.

## 4 CARE AND CLEANING

- Switch the kettle off (lift it from the power base), unplug the power base from the wall socket, and let the kettle cool down completely before cleaning. Wipe the outside surface of the kettle with a damp cloth.
- If necessary, you may use a little household detergent. To clean the filter, see "Water filter" below.
- Do not immerse the kettle or power base in water or any other liquid.
- Do not use harsh or abrasive cleaners or solvents.

### Descaling

- Scale build-up will cause the element to overheat, reducing its working life. It may also cause the safety cutout to operate prematurely, switching the kettle off before the water actually boils.
- As the kettle uses an under floor type element, lime scale can only build up on the walls and floor of the kettle, this is readily seen and should be promptly dealt with.

### Minimise Scale Build-up

- Empty the kettle after each use; do not allow water to stand in the