

- Rinse the inside of the percolator with clean cold water and dry thoroughly.
- Wipe the power base and the outer casing of the percolator with a soft, damp cloth.
- If necessary, you may use a little household detergent. Do not let the detergent get inside the percolator.

- Assemble the percolator and store it away.
- Do not immerse the percolator or the power base in water.
- Do not use harsh or abrasive cleaners or solvents.

**Descaling**

Scale build-up will cause the element to overheat, reducing its working life. It may also cause the safety cut-out to operate prematurely, switching the percolator off before the water boils.

To minimize scale build-up:

- Empty the percolator after each use.
- Do not allow water to stand in the percolator overnight.
- Use filtered water instead of ordinary tap water.
- Descale the percolator regularly using a proprietary brand of descaler suitable for use in plastic bodied products (even in metal percolator there are plastic parts). In areas of very hard water descaling may be necessary as often as once a month.

- When descaling, follow the instructions on the package of descaler. When descaling has finished, empty the percolator and rinse it out several times with fresh water, then fill with fresh water, boil and discard the water, This should ensure that no chemical residues are left in the percolator.

**5 Full One Year Warranty**

A short power supply cord is provided to reduce hazards resulting from becoming entangled in or tripping. Longer cord set or extension cords may be used if care is exercised in their use.

If a longer cord set or extension is used,

1. The marked electrical rating of the cord set or extension should be at least as great as the electrical rating of the appliance, and should be a grounded type three 3-wire cord.
2. The longer cord should be arranged so that it will not drape over the counter top where it can be pulled on by children or tripped over accidentally.

Dualit warrants that this appliance shall be free from defects in material and workmanship for the period of one year from the date purchase. This warranty does not cover consequential damages of any kind or war resulting from accident or misuse.

If your appliance fails to operate properly while in use under normal household condition within the warranty period, simply contact the store where you purchased it or call the Dualit after sales service **Helpline 973.623.9730** or **email dualitusa@smithagy.net**.

If the appliance is found to be defective in material or workmanship, Dualit will, at our discretion repair or replace it free of charge.

This warranty is applicable only to appliance used in the United States. This supersedes all other express product warranty or guarantee statements.

**Dualit®**

**Dualit®**

GUARANTEE AND  
INSTRUCTIONS  
FOR DUALIT  
PERCOLATOR



1	Safeguards
2	Before Use
3	How To Use
4	Cleaning The Percolator
5	Warranty

Congratulations on your purchase of the Dualit Coffee Percolator. Before using your Coffee Percolator please read these instructions carefully and keep them for future reference so that you obtain the best possible results.

Carefully remove all packaging before use but keep the packaging until you are satisfied that the Coffee Percolator is working correctly.

## 1 IMPORTANT SAFEGUARDS

When using electrical appliance, basic safety precautions should always be followed, including the follow:

### 1. READ ALL INSTRUCTIONS

- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock and injury to persons do not immerse cord, plugs, or power base or water or any other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and cleaning the Coffee Percolator.
- Do not operate any appliance with a damaged cord or plug or

after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.

- The use of accessory attachments not recommended by the appliance manufacturer may cause injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner or in a heated oven.
- Do not leave the appliance unattended when in use.
- This Coffee Percolator is for Household use ONLY.
- Do not switch on unless the Coffee Percolator contains at least One cupful of water.
- Never overfill the Coffee Percolator –boiling water may splash out.

## SAVE THESE INSTRUCTIONS

### 2 BEFORE USE

- Remove all packaging from the percolator and its power base. Before using the percolator for the first time, or if it has been out of use for a long time, fill with water to the

10 cup mark and use without coffee for one operation, then discard the water and rinse the percolator out with fresh cold water.

### Connection To The Mains Supply

- Check that the voltage marked on the appliance corresponds with the supply voltage.

### 3 HOW TO USE

- Position the power base as close to a wall socket as possible. Locate the mains cable so that it does not overhang the work surface, & cannot be caught accidentally. Shorten the mains lead by winding it around the cord storage area under the power base, and bring it out of the cord exit in the base.

### Opening The Lid

- Remove the percolator from the power base.
- Hold the percolator handle firmly in one hand, hold the lid knob in the other, and remove carefully.

### Filling

- Remove the percolator from the power base.
- Lift the lid from the percolator and remove the stainless steel cover, coffee basket and percolator tube.
- Fill the percolator with the required amount of fresh cold water. The capacity, in cups, is marked on the inside wall of the percolator.
- Do not attempt to use the percolator if the water level is below the 4 cups

mark, and do not fill it above the highest cup mark.

### If the percolator is overfilled, boiling water may be ejected, causing a scalding hazard.

- Put the required amount of ground coffee in the coffee basket. These markings correspond with the cup markings on the water level indicator.

The markings are given purely as a guide. You will need to experiment to find the quantities necessary to suit the blend you use and your own taste.

When filling the basket, put a finger over the centre tube to prevent coffee grounds from falling through the tube.

- Lower the coffee basket onto the percolator tube until the bottom of the basket rests on the spring.
- Hold the percolator tube/coffee basket assembly by the top of the percolator tube, and lower the whole assembly into the percolator, so that the bottom of the percolator tube fits on the element in the centre of the percolator.
- Place the cover on top of the coffee basket, lower the percolator lid on to the top of the percolator, and push firmly to close.
- For the lid to close properly, the percolator tube must be centred. If the lid will not close properly, rotating it should solve the problem.

### Brewing

- Check that there is sufficient water in the percolator.
- Plug the power base into the wall socket.
- Gently position the percolator onto the power base. The “orange” light will come on immediately and cycle on and off until turning green.
- The element will boil a small amount of water rapidly, forcing it up the percolator tube and into the lid knob, where it will be directed down onto the basket lid, and into the coffee. While this water is percolating through the coffee, the element will boil more water and force it up the percolator tube.
- When all of the water has circulated in this way, the “orange” power light on the base of the percolator will change to “green” which tells you that your coffee is ready to pour. The “green” power light will stay on and the percolator will keep your coffee hot while it is plugged into the electrical outlet.
- Remove the percolator from the power base before attempting to pour. After use always remove from the power base and never leave it switched on unattended.
- When filling or carrying the percolator, do not tilt it backwards, as this may allow water to pass through the steam tube onto the control area.

Should this happen, the percolator must be allowed to dry before reuse.

- To avoid the risk of splashing, pour **slowly** and do not over-tilt the percolator.

**WARNING: IF THE PERCOLATOR HAS JUST BEEN USED THE CONTENTS WILL BE HOT. TAKE CARE AS THE LID IS OPENED.**

### Boil Dry

- Do not switch the percolator on unless it contains at least one cup of water. Misuse of this kind will shorten the life of the percolator.
- If the percolator is accidentally switched on when it does not contain sufficient water, a boil-dry device will automatically switch it off. Wait until the percolator has cooled down before refilling. The lid may be hot and the water may spit as it touches the percolator base.

### 4 CLEANING THE PERCOLATOR

- Unplug the power base from the power socket.
- Pour away any remaining liquid and allow the percolator to cool down fully.
- Remove the lid, coffee basket, cover and percolator tube.
- Dispose of the used coffee grounds.
- Wash the lid, coffee basket, cover and percolator tube in hot soapy water, rinse in clean cold water, and dry thoroughly.