 


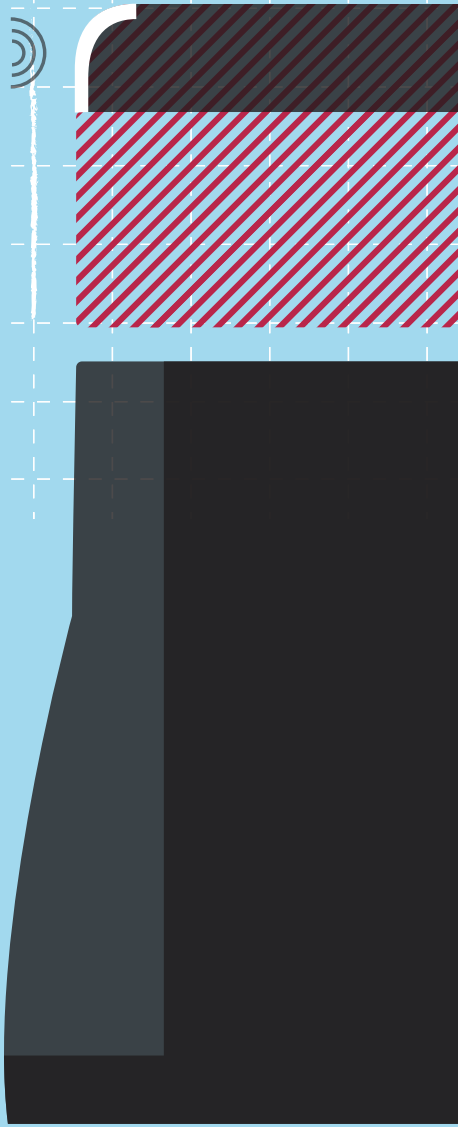

Espressione

SMART COFFEE GRINDER



IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- 1 READ ALL INSTRUCTIONS BEFORE USING THE MACHINE.
- 2 To protect against electrical shock, do not immerse the cord, plug or the appliance in water or in any other liquid.
- 3 This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
- 4 Unplug from outlet when not in use, before putting on and taking off parts, or before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
- 5 Do not use appliance for other than intended use.
- 6 Avoid contacting moving parts.
- 7 Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, has been dropped or damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
- 8 The use of attachments not recommended or sold by the appliance manufacturer may cause fire, electric shock or injuries.
- 9 Do not use outdoors.
- 10 Do not let cord hang over edge of table or counter, or touch hot surfaces.
- 11 Check bean hopper for presence of foreign objects before using.
- 12 This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
- 13 This appliance is for household use only.
- 14 Do not place on or near a hot gas or electric burner or in a heated oven.

- 15 The cells shall be disposed of properly, including keeping them away from children, even used cells may cause injury.

SAVE THESE INSTRUCTIONS

! WARNING: Chemical Burn Hazard. Keep batteries away from children. This product contains a lithium button/coin cell battery. If a new or used lithium button/coin cell battery is swallowed or enters the body, it can cause severe internal burns and can lead to death in as little as 3 hours. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep it away from children. If you think batteries might have been swallowed or placed inside and part of the body, seek immediate medical attention.

MAINTENANCE AND CLEANING

DO NOT IMMERSE THE MOTOR BASE IN WATER.

DO NOT PLACE THE APPLIANCE IN THE DISHWASHER.

- 1 Before cleaning, unplug the appliance from electrical outlet.
- 2 Wash the cover in warm and soapy water. Rinse and dry it completely.
- 3 Wipe the blades, stainless steel bowl, exterior and motor base with a damp cloth or paper towel to remove any excess ground coffee.
- 4 Any other servicing should be performed by an authorized service representative.


INSTRUCTIONS

Before using your appliance for the first time, wipe the stainless steel bowl, blade, hopper and cover with a damp cloth. Allow to dry completely before using.


- 1 *Remove cover and place coffee beans into the stainless steel bowl. Do not exceed **50 grams** of beans weighed at a time.
- 2 Place the cover on the appliance.
- 3 Plug in the appliance.
- 4 Hold the unit with one hand and make sure the cover is securely in place, press the button on the cover to switch-on with the other hand. To stop it, simply release the button. Do not remove the cover before the blades have stopped rotating.

- ⑥ *This appliance is intended for an operation maximum of **15 seconds on**.
- ⑦ Experimenting with the length of grind will enable you to get exactly the grind you prefer for the coffee.
- ⑧ When the blades have stopped, unplug the unit. Remove the lid and the ground coffee.

DIAGRAM OF PARTS

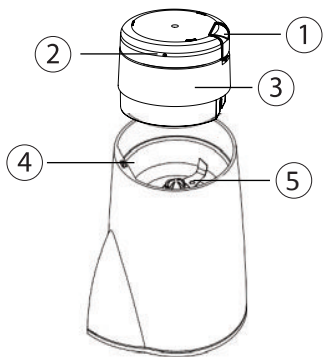

BATTERY INSTALLATION

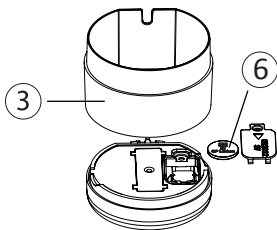

1. ON/OFF SAFETY SWITCH
2. LED INDICATOR
3. SMART LID
4. STAINLESS STEEL GRINDING BOWL
5. BLADE
6. BATTERY (CR2032 3V)



HOW TO GRIND THE BEANS

Before using the mobile app, please do ensure button battery (CR2032 3V) got full power. Please understand that the app is a client for coffee grinder, it does not work alone.


- ① Open i1105 app on your smartphone





- 2 Press the button to connect i1105 with your smartphone (ensure Bluetooth enabled)
- 3 The app is searching your i1105 device

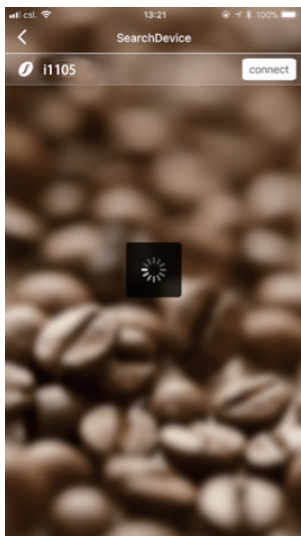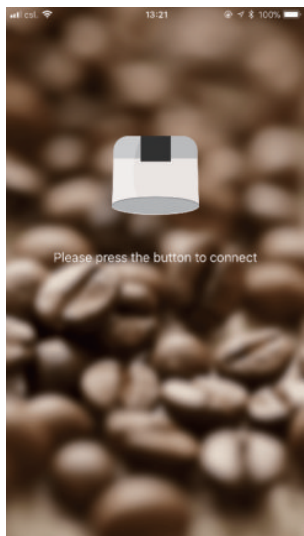





- 4 Put the lid on flat surface with opening facing up
- 5 Select function "Grind" or "Measure"

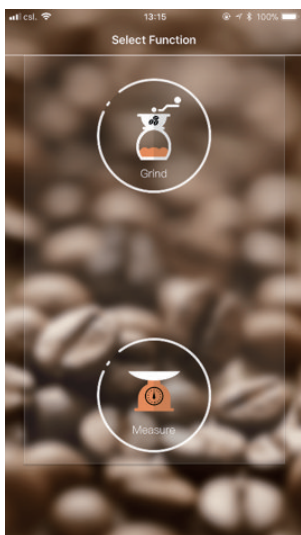

  - 6 **Grind:** Once you press “Grind”, select your flavor of strength and fineness and number of cups

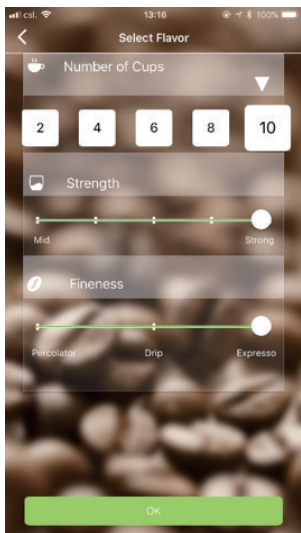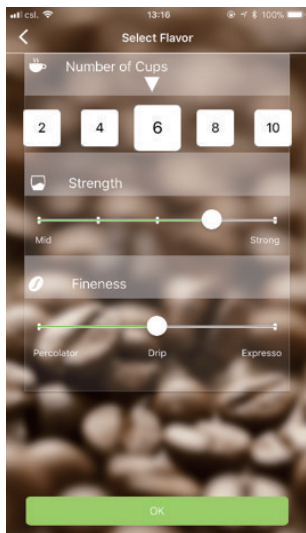


- 7 Measuring beans according to your flavor, put beans in the lid

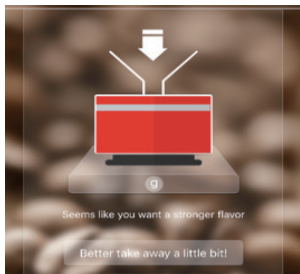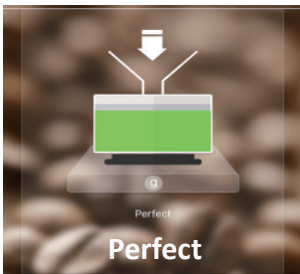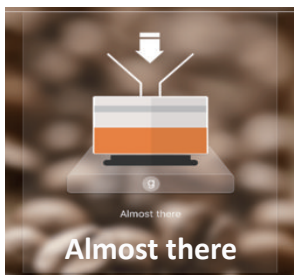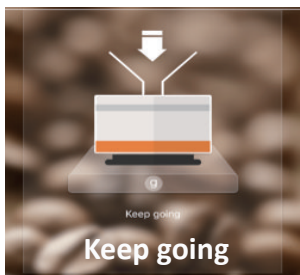


Please note: if overload capacity, better take away a little bit!



8 Put the bean into the grinder, then ready to grind

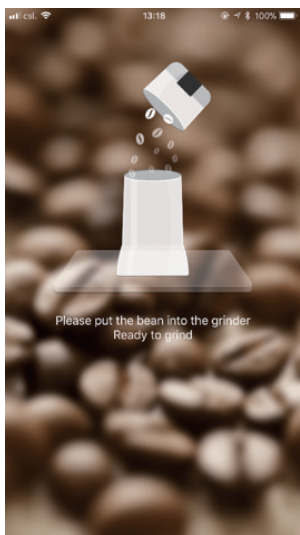

9 Grinding completed, you can enjoy your coffee

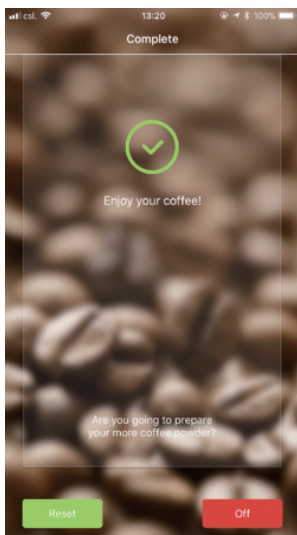

Measure: Other than “Grind”, you can select “Measure” to weigh something else as almond, walnut, etc. with your cover.

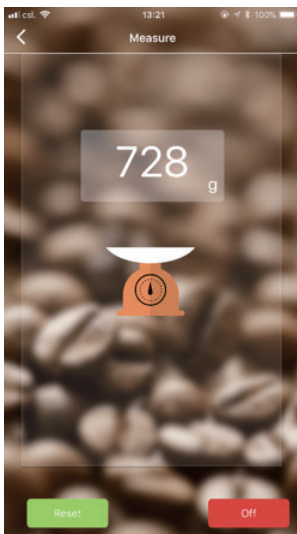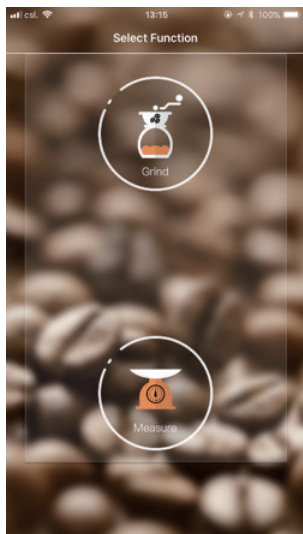

Troubleshooting

- Do ensure battery got full power.
- If your smartphone cannot search your device, you can quit the i1105 app and remove battery from the device and restart above from step 1. Enjoy your coffee with our i1105!

FCC Warning

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

TRADEMARKS

Product names mentioned in this manual may be trademarks or registered trademarks of those products.

All trademarks or brand names mentioned are properties of their respective companies.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.